

Tutorials

- [YouTube Videos](#)
- [ProStraps Setup EN](#)

YouTube Videos

<https://www.youtube.com/embed/xIPKgLYhDtU?si=BeedRPrLkOBAcdf9>

<https://www.youtube.com/embed/HnMO58uNSC8?si=juW7Ews2jdxMhwgl>

ProStraps Setup EN

The ProStraps increase your comfort while playing, allowing you to play with a hand-free feeling.

🕒 Installing the ProStraps on your controllers should take 10 minutes.

Make sure you work in a clear area and be very careful. Some parts can easily be lost.

META QUEST 2

OPTION 1: PROSTRAPS WITHOUT MAGCUP



Remove the battery Cover from the controller.

Remove the plastic strip from the sticky pad, on the rubber part of the ProStraps.




The sticky pad facing the Cover interior, insert the Cover's notch inside the ProStrap's hole. Press the sticky pad for a couple of seconds to ensure adhesion between the ProStrap and the Cover.



Take your controller with the battery uncovered.

Remove the Meta Quest 2's Wrist Strap and replace it with the ProStrap Ladderlock's stub. Gently push it to the bottom.

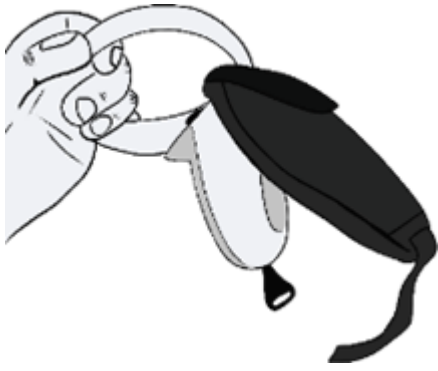

Put back the battery's cover on the controller.



Insert the ProStrap's strip inside the Ladderlock.


Now, you have your Quest 2 Controller with a ProStrap. (note to Tao: I can't copy the arrow image even if I want to)




Tighten the strip around your hand and adjust the ProStrap around your hand.

Do it for the other one, and have fun.

OPTION 2: PROSTRAP WITH MAGCUP

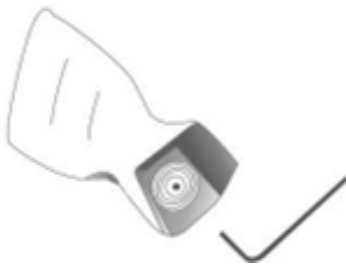


Unscrew the magnet inside the MagCup with the Allen key. Put the Allen key in the magnet hole and push the MagCup's M4 square nut, from inside to outside. You can do leverage with the Allen key to make the task easier.

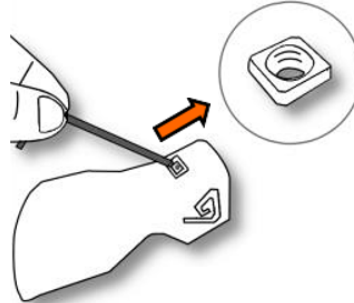


When the square nut begins to go out, use the Allen Key from outside to remove it completely.

The square nut is not useful anymore. But we recommend you to keep it, in case you had to remove the ProStrap.

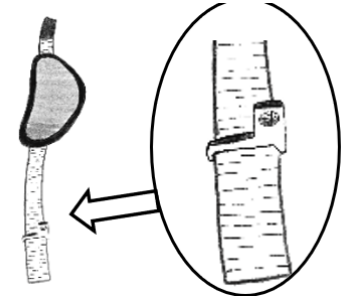

Insert the sling on the "L" nut (the part with the circle hole must be on the rounded side of the ProStrap).

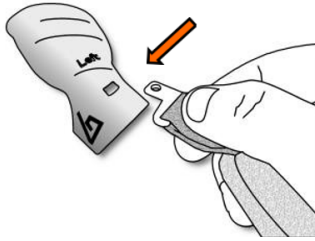

Insert ProStrap's metallic part inside the previously freed hole. Be sure to have the soft part of the ProStrap facing the MagCup and the Velcro part facing outward.



Screw back the magnet in its place with the Allen key.



Remove the battery Cover from the controller. Remove the plastic strip from the sticky pad, on the rubber part of the ProStraps.



The sticky pad facing the Cover interior, insert the Cover's notch inside the ProStrap's hole. Press the sticky pad for a couple of seconds to ensure adhesion between the ProStrap and the Cover



Put back the Prostrap-Upgrade Cover on its controller.



Insert the controller wrist strap inside the MagCup and bring it out through the hole provided for this purpose.



Insert the Controller into the MagCup. You can use the Wrist Strap to guide the controller inside the MagCup. Push until there is 2-3mm between the MagCup and the side button.



You can insert your hand between the MagCup and the ProStrap. Adjust the ProStrap according to your preferences.



Do the same with the other ProStrap and controller.


Now, enjoy your game "hands-free"!

META QUEST 1 / RIFT S


OPTION 1: PROSTRAPS WITHOUT MAGCUP



Remove the battery Cover from the controller.

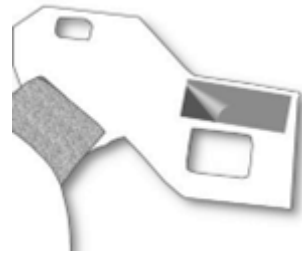

Remove the plastic strip from the sticky pad, on the rubber part of the ProStraps.

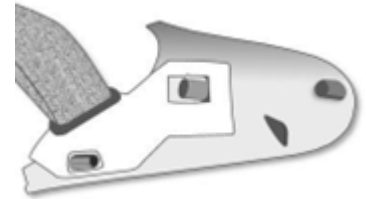

The sticky pad facing the Cover interior, insert the Cover's notch inside the ProStrap's holes. Press the sticky pad for a couple of seconds to ensure adhesion between the ProStrap and the Cover.



Take your controller with the battery uncovered.

Remove the Oculus Quest 2's Wrist Strap and replace it with the ProStrap Ladderlock's stub. Gently push it to the bottom.



Put back the battery's Cover on the controller



Insert the ProStrap's strip inside the Ladderlock.


Now, you have your Quest 1 / Rift S Controller with a ProStrap.




Tighten the strip around your hand
and adjust the ProStrap around your
hand.

Do it for the other one, and have fun!


OPTION 2: PROSTRAP WITH MAGCUP

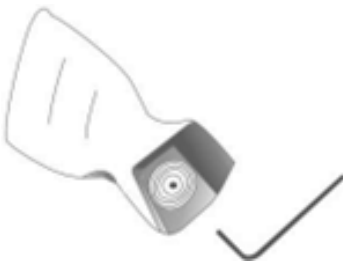


Unscrew the magnet inside the
MagCup with the Allen key
Put the Allen key in the magnet hole
and push the MagCup's M4 square
nut, from inside to outside. You can
do leverage with the Allen key to
make the task easier.

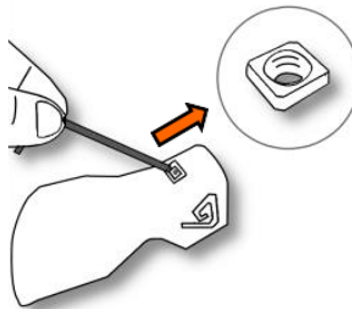


When the square nut begins to go out,
use the Allen Key from outside to
remove it completely.
The square nut is not useful anymore.
But we recommend you to keep it, in
case you had to remove the ProStrap.

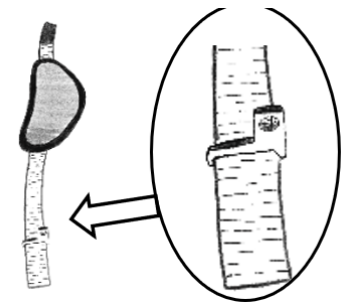

Insert the sling on the "L" nut (the
part with the circle hole must be on
the rounded side of the ProStrap).

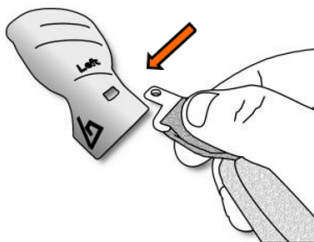


Insert ProStrap's metallic part inside
the previously freed hole.
Be sure to have the soft part of the
ProStrap facing the MagCup and the
Velcro part facing outward.

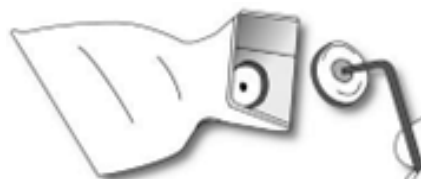

Screw back the magnet in its place
with the Allen key.



Remove the battery Cover from the
controller.
Remove the plastic strip from the
sticky pad, on the rubber part of the
ProStraps.

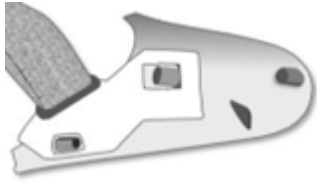

The sticky pad facing the Cover interior, insert the Cover's notch inside the ProStrap's holes. Press the sticky pad for a couple of seconds to ensure adhesion between the ProStrap and the Cover.



Put back the ProStrap-Upgraded Cover on its controller.



Insert the controller wrist strap inside the MagCup and bring it out through the hole provided for this purpose.



Insert the Controller into the MagCup. You can use the Wrist Strap to guide the controller inside the MagCup. Push until there is 2-3mm between the MagCup and the side button.



You can insert your hand between the MagCup and the ProStrap. Adjust the ProStrap according to your preferences.



Do the same with the other ProStrap and controller.

Now, enjoy your game "hands free"!

PICO 4

OPTION 1: PROSTRAPS WITHOUT MAGCUP



We use the right-hand controller. The steps are the same for the left.



Place the top clip (plastic part) inside the controller's ring.



While holding the clip in place, clip it by pushing it inward with your thumb.



Slide the clip against the controller.



Take the elastic sling.



Pass it around the ring.



And scratch it back on the ProStrap. *You will need to twist it at the very end, so it doesn't bother you.*



You're done, you have your ProStraps installed on your Pico 4 controller.

Do the same for the other one, and have fun!

OPTION 2: PROSTRAP WITH MAGCUP



Unscrew the magnet inside the MagCup with the Allen key. Put the Allen key in the magnet hole and push the MagCup's M4 square nut, from inside to outside. You can do leverage with the Allen key to make the task easier.



When the square nut begins to go out, use the Allen Key from outside to remove it completely. The square nut is not useful anymore. But we recommend you to keep it, in case you have to remove the ProStrap.



Insert the "L" nut in the cup. The way matters: it needs to point toward the back of the cup.



Screw the magnet back.



Insert the controller in the MagCup starting with the ring on the bottom and push inward.



While holding the top of the ProStrap lock (plastic part) in place, clip it by pushing it inward with your thumb.



Slide the lock against the controller.



Insert the elastic in the "L" nut.



And scratch it back on the ProStrap.



You're done, you have your ProStraps installed on your Pico 4 controller.

Do the same for the other one, and have fun!