

# Tutorials

All the tutorials traditionally found on our website, pertaining to the Starter CQB Gunstock in alphabetical order

- [YouTube Videos](#)
- [Starter Shoulder Extension Upgrade EN](#)
- [Starter Switch Side instructions EN](#)

# YouTube Videos

[https://www.youtube.com/embed/v-OPal\\_L\\_9o?si=gUCG3IKzK0kyAV3R](https://www.youtube.com/embed/v-OPal_L_9o?si=gUCG3IKzK0kyAV3R)

<https://www.youtube.com/embed/JqMz-i5TAP4?si=jWOQLiegIsW7OXsO>

[https://www.youtube.com/embed/R7SYyDTQNfs?si=c2whzj\\_BjHr9P6-](https://www.youtube.com/embed/R7SYyDTQNfs?si=c2whzj_BjHr9P6-)

[https://www.youtube.com/embed/yX5ITCMh\\_3Y?si=DB4Xc4cegNq47uCY](https://www.youtube.com/embed/yX5ITCMh_3Y?si=DB4Xc4cegNq47uCY)

# Starter Shoulder Extension Upgrade EN

The Cross-Starter allows you to enhance your Pro/Mag-Starter and increase your comfort while playing, and improve your in-game aim even more precisely than the classic Starter CQB.

🕒 Upgrading to the Cross-Starter should take you 5 minutes.

For video setup, [you can check our YouTube tutorial Playlists.](#)

Make sure you work in a clear area and be very careful, some parts can be easily lost.




Insert the Starter's tube in the stock upgrade's connector.

Tighten the screw on the connector (not too strong, you do not want to break it).



Loosen the stock's screw and position it in a square (90°) angle with the tube.

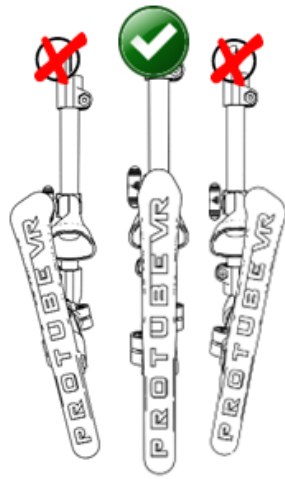

Adjust the tube with the top of the stock and tighten the screw (arrowed in 3<sup>rd</sup> picture).



You can adjust the rear tube and stock to fit your gameplay, and attach the sling.  
*We recommend having the cheek rest parallel to the Starter's tube, but it's up to you*  
**Enjoy!**

# Starter Switch Side instructions EN

Here is how to switch the laterality of your Starter CQB.

🕒 This process should take 10 minutes.

For video setup, [you can check our YouTube tutorial Playlists.](#)

This tutorial shows right-handed to left-handed. Left-handed to right-handed use the same steps, you will just need to follow them in mirror.

Make sure you work in a clear area and be very careful. Some parts can easily be lost.

## STEP 1: FASTENED TO MAGNETIC CUP

---

---



Remove the fastened cup using the bigger Allen key, and detach the magnetic cup.  
*Keep all parts, you will need them to assemble the cup back.*



Exchange the position of both connections.  
*The butterfly screws must be on the same side.*



Unscrew the black support on the fastened cup using the medium Allen key.  
*Be careful not to lose the square nut on the back of the cup.*



Remove the magnet from the cup using the smaller Allen key, and screw it to the other cup.  
*Be careful not to lose the square nut here too.*



You now have your magnetic cup for the other hand.

## STEP 2: MAGNETIC TO FASTENED CUP

---



You removed the magnet on the previous step. Screw the black support back on the cup that has no magnet.  
*Take care not to lose the square nut.*



Put the screw with the O-ring back on the black support.



Place the notched washer on the screw.



Slot them in the T-connection.

Place the second O-ring in the hole,  
around the screw.

Place the hex nut. Screw them all  
together.



Now you can attach the magnetic cup back.

**And there you have your left-handed Starter CQB.**